ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

LOCKWOOD / DIGITAL AND SMART LOCKS

001Touch Plus Smart Deadlatch



RANGE
001Touch
TYPE
Digital or smart lock
FUNCTIONS
Entrance
SIZES
backset 60 mm, door thickness 32 to 60 mm, latch projection 18 mm
MATERIAL
Zinc
FINISHES
Polished chrome, Matte black
CODE
LWL-001TDDL-CPDP / LWL-001TDDL-MBKDP

WARRANTY (DOMESTIC USE)

Mechanical: 25 years / Electronics: 3 years (batteries not covered)

Conditions: domestic use; installed and cared for to Lockwood's instructions; proof of purchase. Summary of the Lockwood (ASSA ABLOY) residential warranty, checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- Keypad, key tag, app or key entry
- Works with the Yale Home app
- Low battery warning plus 9V emergency contacts
- Suits timber doors 32 to 60 mm thick
- Stainless steel latch with 18 mm projection

DIMENSIONS

The dimension drawing and full specifications from Lockwood follow on the next page.

Lockwood 001Touch Plus Smart Deadlatch
Installation Guide

Lockwood 001TP - Guide (3)

LOCKWOOD 001 TOUCH PLUS



- Please read the instructions before fitting and using the 001 Touch Plus Smart Deadlatch. The functions and design of this product can be changed without prior notice for performance and quality improvements.

INSTALLATION HARDWARE


External Keypad


001 Deadlatch


Battery Pack

- L Shape Home Network Module
- DoorSense™ Magnet
- DoorSense™ Magnet Cover
- Strike Plate
- Door Frame Strengthener
- Key Tag x 2
- Mechanical Keys x 2
- AA Batteries x 4
- Timber Fixing Screws x 7
- Battery Pack Retainer Screw x 3 (20, 30 & 40mm)
- Self tapping battery pack fixing screw x 1
- Keypad Retainer Screws x 6 (20, 30 & 40mm)
- Door Frame Strengthener Screws x 2

- Fit the lock using a hand held Phillips screw driver to avoid cross threading fixing screws. If using a cordless drill please ensure it is set to low speed & torque.

1 PREPARE YOUR DOOR

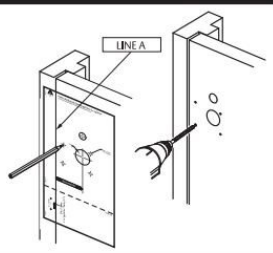

- Select CLOCKWISE OR ANTI-CLOCKWISE side of template to suit door opening direction .
- Position template and prepare door as specified on template. WARNING : Care must be taken when drilling and affixing screws to jamb. Screws must NOT come in contact with electrical wires in jamb.

2 REMOVE MOUNTING PLATE FROM LOCKSET

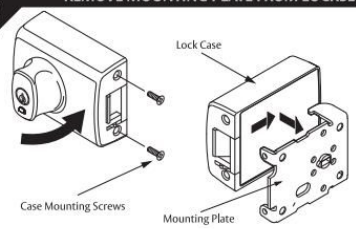

- To remove the mounting plate from the lockset, rotate the turnbody fully clockwise to HOLD BACK position.
- Remove the two case mounting screws from lock case.
- Take mounting plate out of lock case.

3 CUT CONNECTING BAR

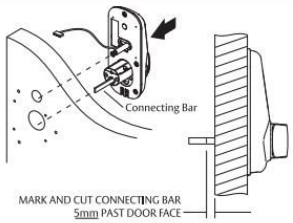

- Position the 001 Touch Plus external keypad in the door as shown.
- Mark the Connecting Bar with **5mm** protrusion **past the door face.**
- Remove the keypad and **CUT CONNECTING BAR TO THE CORRECT LENGTH**. Refer to the Connecting Bar Length Template.

4 SECURE MOUNTING PLATE

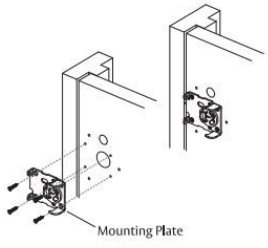

- Fix the mounting plate with the correct length mounting plate 4 x timber fixing screws provided.

5 MOUNT EXTERNAL KEYPAD

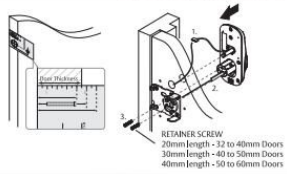

- Feed the external keypads CONNECTOR CABLE through hole in the door (1.)
- With the CONNECTING BAR VERTICAL, assemble the keypad to the door and engage connecting bar into the hub slot on the mounting plate. (2.)
- Place the RETAINER SCREWS (x2) through slot in hub (3.) and secure the external keypad cylinder. Ensure that both screws are tightened firmly and hub is free to rotate.
- Use the template provided to choose correct screw length according to your door thickness .

6 CONNECT THE BATTERY PACK

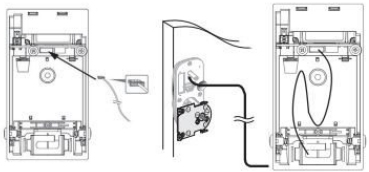

- Connect the cable to the top of the battery pack into the 10 pin connection slot. Ensure the cable is securely in place.
- Feed the cable through the metal slot. Then being careful not to overlap it, zig-zag any excess cable behind the battery pack.

6+ SECURE BATTERY PACK - CONTINUTED

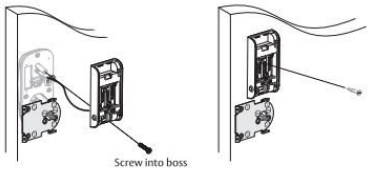

- Make sure the battery pack is square with the door.
- Align the metal slot with the keypad's top fixing post. Take the battery pack retainer screw and fix it into place. Use the same length screw as per step 5. Then take the Self tapping battery pack screw and secure the case.

7 ASSEMBLE LOCKSET

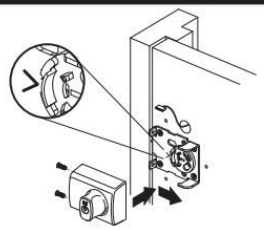

- Rotate the turnknob fully clockwise to HOLDBACK position.
- Ensure the notch on hub is aligned with the V visible on the on the mounting plate as shown. Fit the lock case body to the mounting plate as shown.
- Secure Lock Case to the mounting plate using the two case mounting screws.

8 INSERT HOME MODULE, DOORSENSE MAGNET & BATTERIES

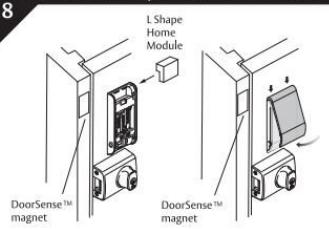

- Insert L Shape Home Module to the slot at the top of the battery pack.
- Taking the DoorSense ™, remove the film from the back and align the magnet level with the Home module and attach it to the door frame.
  If you have a light coloured door frame, we recommend placing the white magnet cover over the magnet to allow it to blend in.
- Insert the 4xAA batteries into the battery case, then close the cover.
- A series of beeps will sound after installing the batteries, powering up your lock.

9 MOUNTING STRIKE

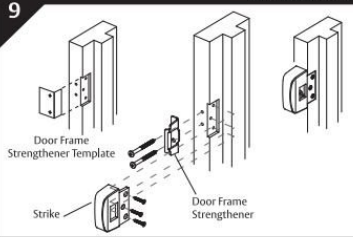

- Position the strike on jamb , directly opposite the lock case and mark outline of strike flange on jamb edge.
- Mortice the area out to fit the strike in flush.
  Note: 3mm max. gap between lock and installed strike.
- Position door frame strengthener template in strike flange mortice as shown above.
- WARNING: Care must be taken when drilling and affixing screws to jamb. Screw must NOT come in contact with electrical wires in jamb. Mark and drill holes as specified on template.
- Fit and fix the door frame strengthener using two door frame strengthener screws.
- Locate striker over door frame strengthener and secure using three timber fixing screws. Note: Pre-drill 3mm x 25mm deep for woodscrews.

LOCKWOOD ASSA ABLOY

Lockwood 001Touch Plus Smart Deadlatch
Installation Guide

10 CHECK POINTS AFTER INSTALLATION

Ⓐ Make sure to leave the door open when registering your PIN because you may accidently lock the door while trying to register or change your PIN code.

Ⓑ Touch the keypad with your palm to wake up the keypad.

Ⓒ Enter the PIN code 123456 and enter* button or touch the keypad with your palm to open the door.

Ⓓ Turn the knob handle several times to retract the latch bolt.

Ⓔ The knob handle will not retract the latch bolt after a few seconds.

PLEASE NOTE: Remember to change your master code after installation.

⚠ **To avoid any possibility of being locked out, do not close the door until a PIN code has been successfully registered to allow access back in.**

11 CONNECTING YOUR LOCK TO THE YALE HOME APP

Now the lock is ready to connect with Yale Home App allowing user to get mobile App functionality. Please refer to 'Connecting with Yale Home App' section of the user manual. NOTE: TO ENABLE MOBILE APP FUNCTIONALITY WE HIGHLY RECOMMEND TO CONNECT YOUR LOCK WITH YALE HOME APP IMMEDIATELY AFTER SETTING UP THE MASTER CODE.
For security reasons, when the lock gets registered with Yale Home App, the lock enables 'App mode' and prevents the user to register the credentials from keypad (such as: add/remove user code except the master code). All existing credentials (user code / key tag) will be erased upon initialisation except the master code. It is HIGHLY RECOMMENDED to register the credentials through Yale Home App only (except Key Tag).

ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 ©2023
Experience a safer and more open world
ASSA ABLOY