ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

TURNER HASTINGS / KITCHEN SINK

Cuisine Double Bowl Inset Sink with Drainer



RANGE
Cuisine
TYPE
Kitchen sink
BOWLS
Double with drainer
MATERIAL
Fireclay or ceramic
SIZES
1160 x 500 mm
BOWL DEPTH
185 mm
TAP HOLES
Optional
FINISHES
Gloss White, Matte White, Matte Black
CODE
CUD116FS-LHD / CUD116FS-RHD / CUD1163FS-NTH-OF-MW / CUD1163FS-NTH-MW / CUD1163FS-RHD-OF-MW / CUD116FS-NTH-OF-MB / CUD116FS-NTH-MB /

WARRANTY (DOMESTIC USE)

Fine fireclay sinks (indoor and outdoor use), domestic: Lifetime

Conditions: installed by a licensed tradesperson; manufacturing faults only; small natural variations are normal. Summary of the Turner Hastings installation, care and warranty information, checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- Double bowl with a built-in drainer
- Left or right hand drainer
- 25.5 litres per bowl
- Inset mount, with or without overflow and tap hole

DIMENSIONS

The dimension drawing and full specifications from Turner Hastings follow on the next page.

TURNER HASTINGS

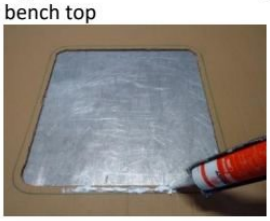
16 McPherson Rd, Smeaton Grange NSW 2567
1300 00 2284
ABN 56 263 133 253
www.turnerhastings.com.au
info@turnerhastings.com.au

INSET SINK INSTALLATION GUIDE

Thank you for purchasing a Turner Hastings Fine Fireclay Inset Sink. If you have any questions during the installation of this product, please do not hesitate to call us on 1300 00 2284.

BEFORE YOU BEGIN

- Read these instructions carefully before you begin this installation.
- Observe all local plumbing and building codes.
- Due to the various cutout sizes possible, and natural variation in fireclay, we recommend using the actual sink instead of the template where possible.
- Prior to installation, unpack the new sink and inspect it for damage. Return the sink to its protective carton until you are ready to install it.
- Due to the variety of installations possible with this sink, you may need to use procedures other than those described.
- It is very important that proper high-quality materials and silicones are used with your sink.
- The cabinet and frame shown in these instructions are generic and may not represent the actual design or structure.
- To ensure a safe and damage-free installation, two people should install the sink.
- All information in these instructions is based on the latest product information available at the time of publication.

1. Place the sink upside down on the bench top. Trace around the outer edges on the bench top. 	2. Draw a second line the correct distance inside the marked line based on the sink you have. 
3. Cut out the bench top on the inside line 	4. Install the waste in the sink, using silicone between the top flange and the sink 
5. Apply silicone around the edge of the bench top 	6. Place the sink into the benchtop, wipe away excess silicone, and leave to cure for 24 hours before use 

Pages from Turner Hastings's own specification. Ask us about this product, we're happy to help.
Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au

TURNER HASTINGS

16 McPherson Rd, Smeaton Grange NSW 2567
1300 00 2284
ABN 56 263 133 253
www.turnerhastings.com.au
info@turnerhastings.com.au

FINE FIRECLAY SINK CARE INFORMATION

As the glazed surface is extremely smooth and non-porous, cleaning with soapy water is usually all that is required to keep your sink clean. To maintain the original appearance, it is important to do a regular clean with non-abrasive cleaners and a soft sponge or cloth.

Fireclay sinks are created by firing the clay at high temperatures therefore some visual distortion may occur. This is not a defect but can be seen to add to the beauty of the product.

Water Stains from Hard Water
In hard water areas limescale can build-up on the surface and become visible when stained by food and drink. We recommend regular cleaning with a solution of 3-parts hot water and 1-part white vinegar or specific limescale cleaners can be used for example Viakal. Rinse well after. Keeping the sink dry will avoid future water stains.

General Stains
Fine fireclay sinks are glazed so are completely nonporous and should not stain. However, if marks or stains occur, they should be removed immediately with hot water and a gentle cleaning agent. Cleaners, such as Jif, can be used to remove tougher stains.
For more stubborn stains, soak a water and detergent mixture overnight, scrub off any dirt and stains, and finally rinse with water.

Light Marks
Pans, metal cutlery and cooking utensils can leave grey metal marks on the surface as the glazed finish is much harder than the metal utensils used in the kitchen. These marks can be removed using a powder compound called Bar Keeper's Friend, or similar. To prevent metal marks, a rubber sink mat or stainless steel grid can be purchased from Turner Hastings to sit in the base whilst washing metal items

Scratches
Fireclay is extremely durable and long lasting. However, if scratches or chips do occur, Cramer Repair Kit is recommended for minor damages to the sink.

Plastic bowls
Avoid using plastic washing-up bowls, as particles of grit can become impregnated in the base of the bowl and act like sand paper causing scratching to the glazed surface.

Do Not Use
Fireclay sinks can withstand many chemical cleaning agents; however, it can cause damage to the wastes and taps. Below is not advised.
- Use of Steel wool, scourers or metal brush
- Harsh cleaners containing severe acidic or alkaline chemicals such as sodium hydroxide, sulfuric acid or hydrochloric acid
- Toilet cleaners such as Chlorinated Cleansers or bleach of any type

Pages from Turner Hastings's own specification. Ask us about this product, we're happy to help.
Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au