ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

NERO / TOWEL RAILS AND RINGS

Bianca Single Towel Rail



RANGE
Bianca
TYPE
Towel rail
SIZES
600 mm, 800 mm
FINISHES
Chrome, Matte Black, Brushed Gold, Brushed Nickel, Brushed Bronze, Gunmetal
CODE
NR9030CH / NR9030MB / NR9030BG / NR9030BN / NR9030BZ / NR9030GM
MATERIAL
Stainless steel

WARRANTY (DOMESTIC USE)

Bathroom accessories: Zen, Opal, York, Bianca, Mecca (home use): 25 years, replacement products or parts on all finishes

Conditions: installed by a licensed plumber; proof of purchase; residential use. Summary of the Nero warranty policy NWP2026.3 (sold after 1 May 2024), checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- Made from 304 stainless steel
- Comes in 6 finishes

DIMENSIONS

The dimension drawing and full specifications from Nero follow on the next page.

Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au

Bianca Single Towel Rail 600mm

Nero

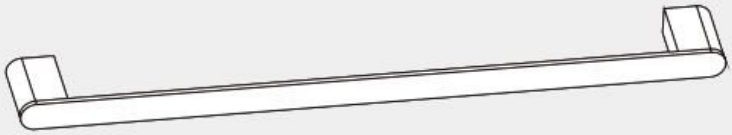

Versions:202510

Warranty Policy

Drawing

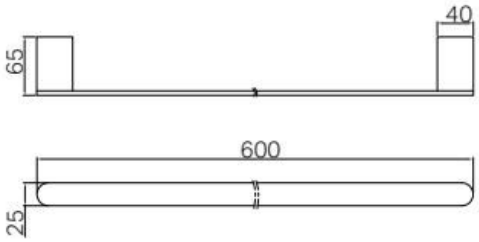

Features

- 304 grade stainless steel construction for durability
- Easy to install

Packaging Includes

1x Single Towel Rail
1x Fixing Kit

Finish & SKU

Chrome NR9024CH	Gun Metal NR9024GM	Brushed Nickel NR9024BN
Matte Black NR9024MB	Brushed Gold NR9024BG	Brushed Bronze NR9024BZ

*Dimensions are nominal measurements only.

Installation Instruction

GENERAL INSTRUCTIONS AND WARNINGS

- Before installation, make sure the wall surface is clean and dry to ensure a secure attachment.
- When tightening screws, do not apply excessive force to prevent damage to the wall or the fixtures.
- Use the correct tools: a drill with a 6mm bit, screwdriver, and level.
- Wear appropriate safety gear, such as gloves and safety glasses, to protect yourself during installation.
- Before drilling, check the wall for any hidden pipes or electrical wires to avoid accidental damage.

MAINTENANCE AND CARE

- Clean the accessories with a soft, damp cloth. Avoid using abrasive cleaners, which can damage the finish.

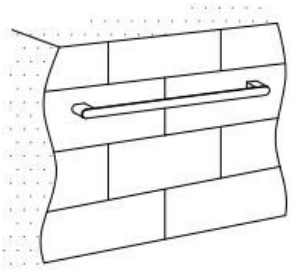

1. Place the accessories in the desired installation position.
Use a level to ensure the accessories is horizontal. Mark the positions directly below the bases with a marking pen.

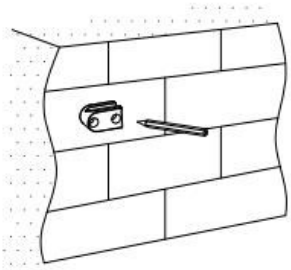

2. Position the fixing blocks at the marked spots. Mark the drilling points through the fixing block holes.

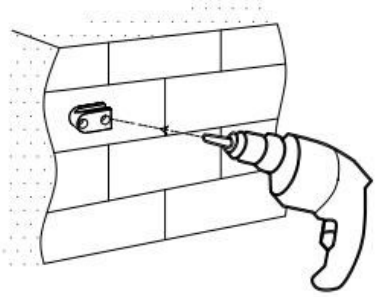

3. Use an electric drill with a 6mm drill bit to drill holes at the marked points.

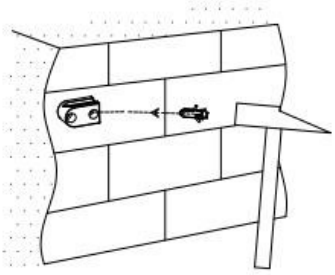

4. Insert the expansion plugs into the drilled holes using a hammer.

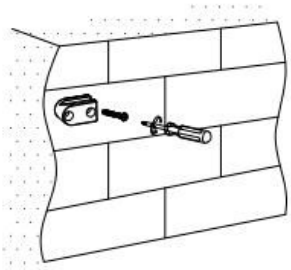

5. Place the fixing block covers over the holes and secure them firmly with expansion screws.

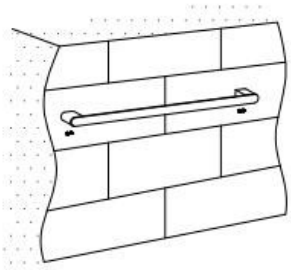

6. Install the accessories by tightening the grub screws.