ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

THERMOGROUP / FLOOR AND WALL HEATING

# Thermotouch 7.6iG Programmable Thermostat



RANGE
Thermotouch
TYPE
Floor and wall heating
SIZES
W85 x H115 x D54 mm
CODE
5220A / 5226A

## WARRANTY (DOMESTIC USE)

Thermostats and accessories: 3 years replacement (12 months parts and labour) / Underfloor heating systems (Thermonet, Thermowire, Thermoscreed, Thermofoil, Thermoslab): Lifetime parts and labour / Thermorad in-wall

Conditions: Proof of purchase showing product code and date is needed, and the claim must fall inside the warranty period; The product must be installed correctly to the instructions and local regulations and used normally; The fault must be confirmed as a manufacturing fault or defect. Summary of the Thermogroup Warranty Information, checked 7 November 2026. Full terms from Romano or the brand.

## FEATURES

- 7 day programmable, 6 events a day
- Comes with a floor sensor probe, ambient sensor option
- Portrait plate supplied, landscape plate sold separately
- Max load 16 A, 3 year warranty

## DIMENSIONS

The dimension drawing and full specifications from Thermogroup follow on the next page.

**Specification Sheet** **Thermotouch 7.6iG 5220A/5226A**

thermotouch
INTELLIGENT HEATING CONTROLS



5220A

5226A with 5223

## Thermotouch 7.6iG thermostat features a sleek white glass display and an improved 7 day 6 event heating schedule

Easily program 6 heating events (3 on and 3 off) for every day of the week to create an efficient, automatic schedule for your electric underfloor heating system.

- Designed to control your electric underfloor heating system easily and automatically
- Built in ambient temperature sensor and external floor sensor for accurate temperature management
- Lock the screen to prevent tampering by holding the up and down arrows for 5 seconds
- Design an economical heating schedule for your underfloor heating system that fits your lifestyle
- Adjust the temperature manually to boost your underfloor heating until the next scheduled heating event



Floor temperature sensor should be installed in a conduit, within a clear area of the floor, and away from any other temperature influences.


Thermogroup
That little bit extra...

1300 368 631
sales@thermogroup.com.au
www.thermogroup.com.au

# Specification Sheet — Thermotouch 7.6iG 5220A/5226A


## Wiring diagram

1. 220-240V AC Supply Live
2. 220-240V AC Supply Neutral
3. Underfloor Heating Neutral
4. Underfloor Heating Live
5. Earth
6. Floor sensor (not polarity sensitive)
7. Floor sensor (not polarity sensitive)

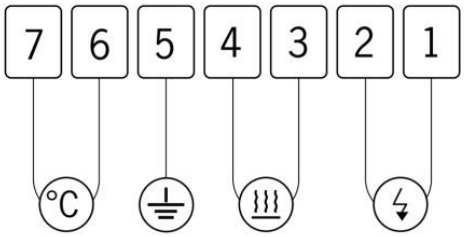


## Box contents

| |
|---|
| 1 x Thermotouch 7.6iG |
| 1 x Installation guide |
| 1 x 3m floor temperature sensor probe |
| 1 x 2m sensor conduit |
| 2 x Fixing screws |
| 1 x Portrait mounting plate |

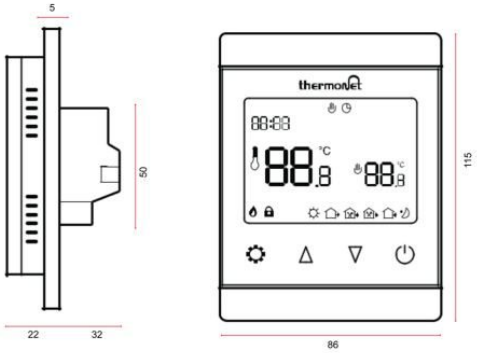


## Technical data

| | |
|---|---|
| Supply voltage | 220 - 240V 50/60Hz |
| Maximum load | 16A (3600W) |
| Backup storage | EEPROM (approx. 1 year backup) |
| Temperature range | 5 ~ 80°C (0.5°C increments) |
| Accuracy | ±0.5°C |
| Sensor rating | NTC 10kΩ @ 25°C |
| Consumption | 2W |
| Warranty | 3 years |
| IP rating | IP30 |
| Width | 86mm |
| Height | 115mm |
| Depth | 54mm (32mm in wall) |

Thermogroup
That little bit extra...

1300 368 631
sales@thermogroup.com.au
www.thermogroup.com.au

Pages from Thermogroup's own specification. Ask us about this product, we're happy to help.
Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au