ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

LOCKWOOD / DOOR KNOBS

Symmetry Imperial Knobset



RANGE
Symmetry
TYPE
Door knob
FUNCTIONS
Passage, Privacy, Dummy, Entrance
SIZES
door thickness 32 to 46 mm
MATERIAL
Stainless steel
FINISHES
Polished stainless steel, Satin stainless steel, Polished brass
CODE
7020PSS / 7020SSS / 7021PB / 7021PSS / 7021SSS / 7022PB / 7022PSS / 7022SSS

WARRANTY (DOMESTIC USE)

Mechanical: 25 years / Finish: 5 years

Conditions: domestic use; installed and cared for to Lockwood's instructions; proof of purchase. Summary of the Lockwood (ASSA ABLOY) residential warranty, checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- Traditional knob in stainless steel and brass
- Entrance (keyed), privacy, passage and dummy versions
- Fixings hidden under a snap-on trim
- Fire tested up to 2 hours on fire door assemblies to AS 1905.1
- Suits timber doors 32 to 46 mm thick

DIMENSIONS


The dimension drawing and full specifications from Lockwood follow on the next page.

LOCKWOOD ASSA ABLOY **SYMMETRY™**

C38-0000012
0418

Drill 25mm hole at center of door edge.

Fold here and fit on the door edge.

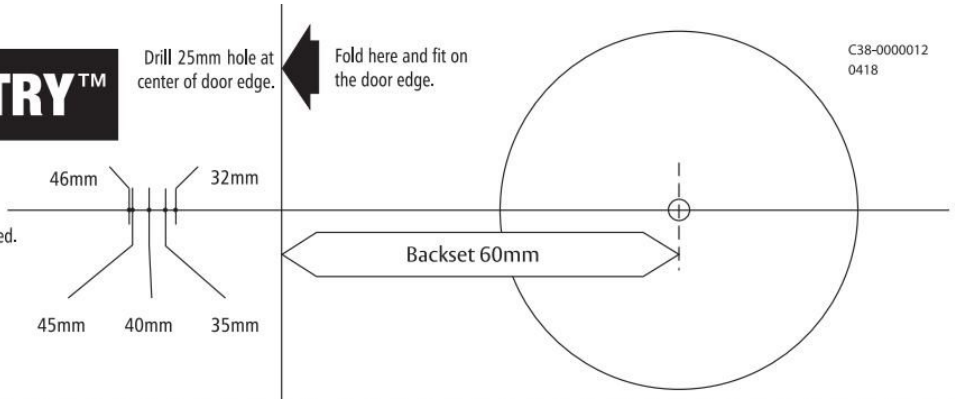


The following requirements should be observed to maintain the finish of your lockset.


A. Do not install locks before doors are painted.
B. To avoid oxidation, refrain from using cleansers or acid chemicals to polish or be in contact with locks.
C. Refrain from using heavy or sharp-edged objects to scrub locks.

NOTE: FOR DOOR THICKNESS 32-46mm


1 MARK HEIGHT LINE ACROSS EDGE OF DOOR.
914mm is the usual height from floor.
Fold template over edge of door and mark centre at height line.
Mark centres of 25mm and 54mm holes.

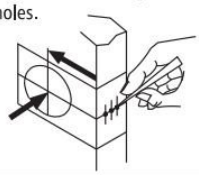


2 DRILL TWO HOLES
Drill 54 mm hole through door, and 25mm hole into edge of door on centres marked on template.
Chisel out area for latch plate and install 54mm latch unit.

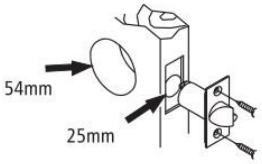


3 INSTALL STRIKE
Auxiliary bolt stops against strike, as illustrated, preventing forcing when door is closed.

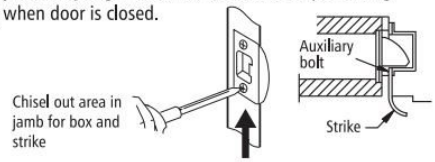


4 REMOVE INSIDE TRIM
Use nail end of wrench to depress inside knob catch through hole of sleeve collar and slide inside knob off spindle.

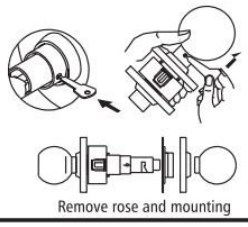

5 ADJUST FOR DOOR THICKNESS
Adjust lock to fit door thickness by rotating outside rose.
Lock 32mm to 46mm thickness.

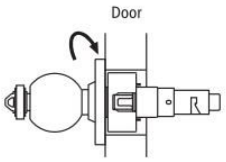


6 INSTALL LOCK
Latch unit must be installed before installing lock.
Be sure lock housing engages latch prongs and retractor interlocks with latch bar.

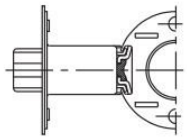


7 INSTALL INSIDE ROSE
Install rose by snapping it onto the recess of mounting plate.




8 INSTALL KNOB
Align lug on knob with narrow slot on spindle and push knob all the way in until retainer clicks into slot on knob.

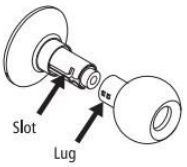

9 DETERMINE CORRECT KEY HOLE POSITION
Be sure to install cylinder with key hole opening facing down as illustrated.

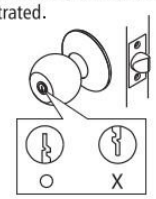

10 FOLLOW STEPS BELOW TO CORRECT A CYLINDER PLACED IN REVERSE
A. First, turn knob clockwise until knob catch appears in small hole.
B. With other hand, turn key counterclockwise 30-90 degrees.
C. Use wrench to press knob catch as you pull knob out.
D. Turn knob 180 degrees so key hole opening faces down and slide knob into spindle toengage knob catch.
E. Insert key in keyhole and turn key counterclockwise or clockwise about 30 degrees and push knob until it catches. Make sure knob clicks into



ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 9907 © 2018

The global leader in door opening solutions

ASSA ABLOY