ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

LOCKWOOD / DOOR LEVERS

Vivid Lever 4



RANGE
Vivid Collection
TYPE
Door lever
FUNCTIONS
Passage, Privacy, Dummy
SIZES
rose 54 mm diameter x 12 mm, door thickness 32 to 45 mm
MATERIAL
Stainless steel
FINISHES
Satin brass (PVD), Gunmetal (PVD), Satin bronze (PVD)
CODE
VIV1/V4SBPVD / VIV1/V4GMPVD / VIV1/V4BZPVD / VIV2/V4SBPVD / VIV2/V4GMPVD / VIV2/V4BZPVD / VIV3/V4SBPVD / VIV3/V4GMPVD

WARRANTY (DOMESTIC USE)

Mechanical: 25 years / Finish (chrome, satin chrome, stainless and PVD): 10 years

Conditions: domestic use; installed and cared for to Lockwood's instructions; proof of purchase. Summary of the Lockwood (ASSA ABLOY) residential warranty, checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- PVD coated 304 stainless steel, which Lockwood rates at four times the hardness of chrome
- Fixings hidden under a removable rose trim
- 54 mm rose suits doors 32 to 45 mm thick
- Privacy set includes an emergency release from outside
- Matching Vivid hinges, door stops, pulls and cavity sliders

DIMENSIONS

The dimension drawing and full specifications from Lockwood follow on the next page.

LOCKWOOD ASSA ABLOY

Lockwood Vivid®

Internal Door Furniture

32MM - 45MM PRIVACY SET
32MM - 55MM PASSAGE SET
DOOR THICKNESS

INSTALLATION OF PASSAGE AND PRIVACY SET

Door and latch preparation template

VIV-121 (3)

Template

Important Note
Drill hole from both sides of door to prevent splintering of door face.

Hole Drilling Legend
Privacy Latch use V1, V2 & H2.
Passage Latch & Mortice Lock use H1 & H2.

Backset 60mm

V1

2 Mark hole position ready for drilling 25mm furniture hole.

H1

H2

CL

Cut along dashed line

Guide only

Fold here on door edge

If using these holes mark positions and drill 10mm. 3

V2

4 If using these holes mark positions and drill 10mm.

Find centre of door and mark ready for drilling 25mm latch hole. 1

Door preparation and latch installation (steps 1- 10)

1

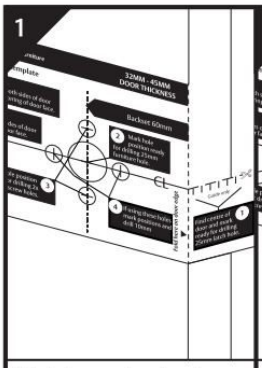

Mark line on the door face approx 1 metre from the floor.
Cut along **- - - dashed** line.
Fold page on door edge.

Align ***CL*** on template with marked line on door face.

2

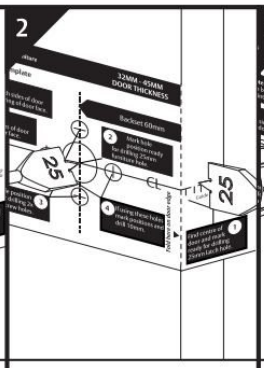

Find centre of door and mark ready for drilling 25mm latch hole.

Mark hole position ready for drilling 25mm furniture hole both sides of door.

3

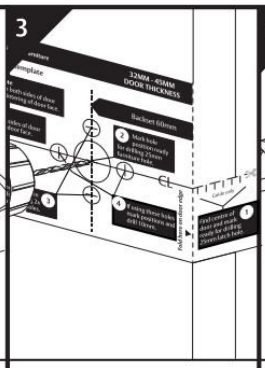

Drill 2mm pilot hole for the furniture both sides of door.

4

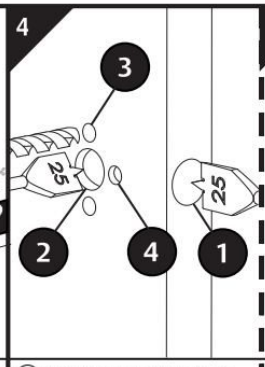

① Drill 25mm latch hole to depth of 80mm, **ensure hole is drilled squarely.**
② Drill a 25mm furniture hole.
③ Drill 10mm holes as shown in template, **from both sides of door to prevent splintering.**

5

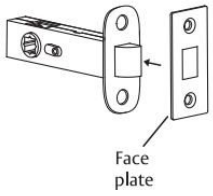

Face plate to be fitted to latch as shown.

6

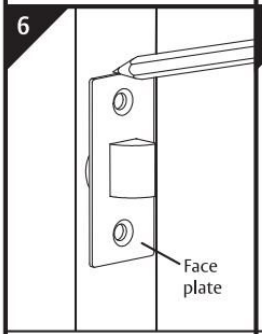

Insert latch into 25mm hole.

Mark around latch face plate and chisel out recess to suit face plate thickness.

Face plate must be flush with door face.

7

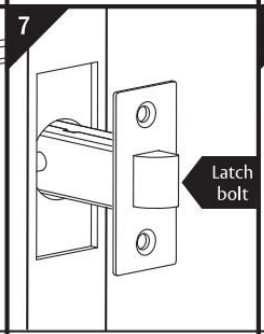

Insert latch with the curved side of the latch bolt facing in the direction that the door closes.

8

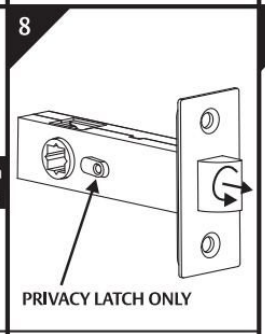

To reverse the latch bolt handing (for doors that open outwards).

Pull Latch Bolt out and rotate to correct hand.

9

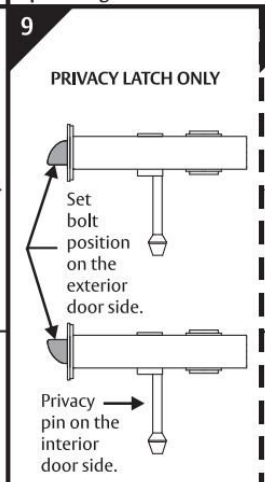

10

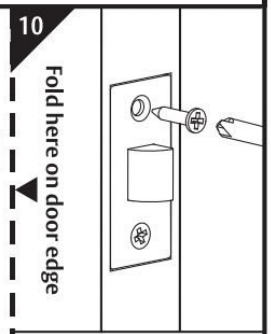

Drill 2 x 2mm pilot holes and affix screws provided.

LOCKWOOD ASSA ABLOY

Lockwood Vivid®

Internal Door Furniture

32MM - 45MM PRIVACY SET
32MM - 55MM PASSAGE SET
DOOR THICKNESS

INSTALLATION OF PASSAGE AND PRIVACY SET

Passage and Privacy set installation (steps 11 - 23)

11

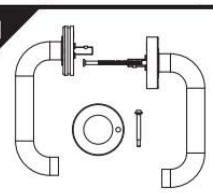

PRIVACY SET (displayed) Parts and assembly

12

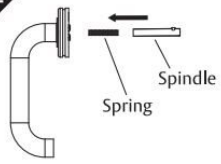

Insert spring and spindle into furniture as shown.

13

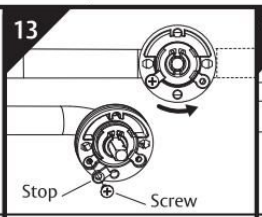

If required, handing the furniture is done by positioning the stop and screw in the correct location to suit the handing required.

14

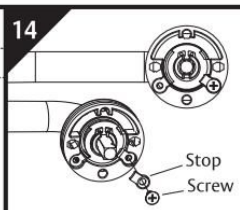

If required, fixed lever is achieved by positioning the stop and screw in the location shown.

15

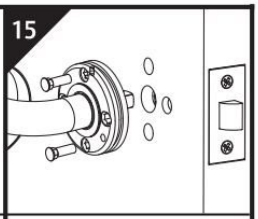

Position lever assembly (side with nut insert) so that it operates downward to retract the latch bolt.

SUITABLE SCREW LENGTH BASED ON DOOR THICKNESS

Cut mounting screws to measured door thickness plus 13mm.

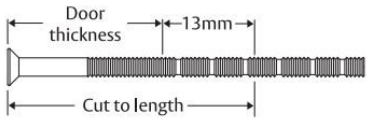

16

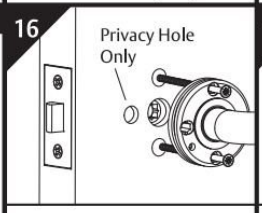

Align spindle into the square opening in latch, screws pass through screw holes.

17

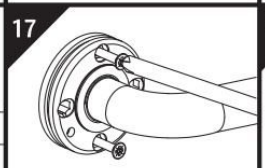

Lightly tighten fixing screws. Check levers are horizontal and in-line with the latch. Then firmly tighten fixing screws.

18

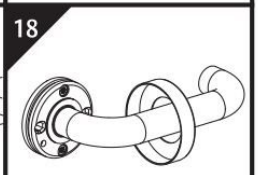

Pass trim over lever. Push trim to secure.

19

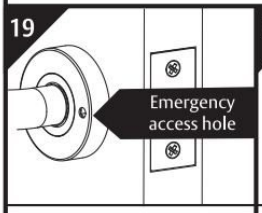

PRIVACY SET ONLY
On the exterior side of door, align emergency access holes on trim and furniture.

20

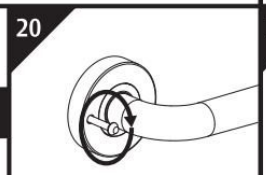

PRIVACY SET ONLY
Screw in the privacy button on the interior side of door through hole in trim.

21

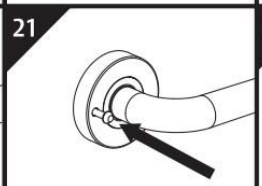

PRIVACY SET ONLY
Depressing the privacy button will lock the (exterior) outside lever.

22

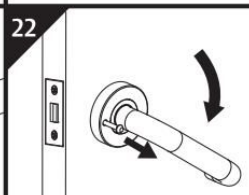

PRIVACY SET ONLY
Rotate (interior) inside lever to release privacy lock.

23

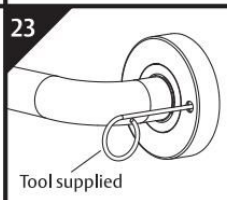

PRIVACY SET ONLY
Insert and push pointed tool supplied to gain access from the (exterior) outside when the privacy button is engaged.

Strike preparation and installation (steps 24 - 30)

24

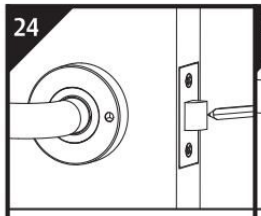

Partially close door. Mark centre of latch bolt. Mark horizontal line along the inside face of the door jamb.

25

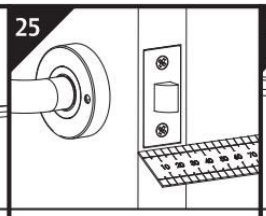

Measure the door thickness and halve it.

26

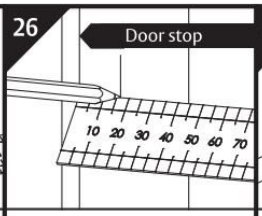

From the door stop along the horizontal line, measure and mark a vertical line at half the door thickness.

27

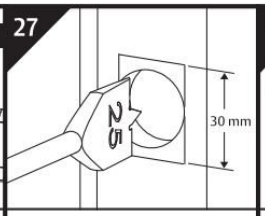

At this point drill 25mm hole, 13mm deep into the door jamb. Mark 30mm x 25mm box. Then chisel out jamb to the same depth for striker box.

28

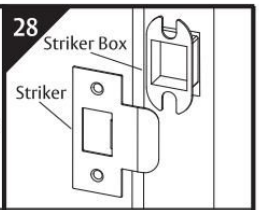

Striker and striker box to be fitted into door jamb.

29

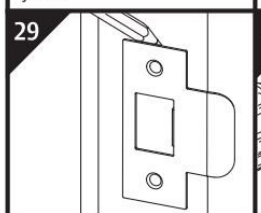

Align strike plate centrally and vertically over this box hole. Mark around plate. Chisel out jamb to allow strike plate & box to sit flush.

30

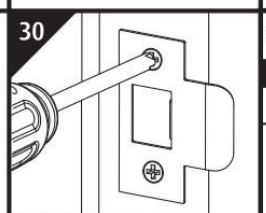

Drill 2x 2mm pilot holes and affix screws provided.

✻ FOR OUTWARD OPENING DOORS REFER TO STEPS 7 & 8.

HANDING OF DOOR ACCORDING TO ENGLISH PRACTICE

DOOR OPENING IN	DOOR OPENING OUT

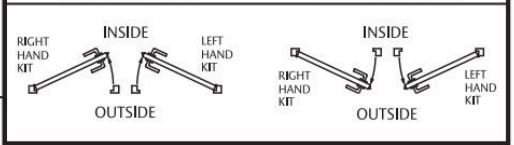

ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 ©2023
Experience a safer and more open world

ASSA ABLOY