ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

LOCKWOOD / FLUSH PULLS AND SLIDING DOOR

Vivid Privacy Cavity Door Slider



RANGE
Vivid Collection
TYPE
Flush pull and sliding door hardware
FUNCTIONS
Privacy
SIZES
54 mm prep hole, backset 60 mm, door thickness 35 to 45 mm
MATERIAL
Stainless steel
FINISHES
Satin brass (PVD), Gunmetal (PVD), Satin bronze (PVD)
CODE
VIVCAV2/SBPVD / VIVCAV2/GMPVD / VIVCAV2/BZPVD

WARRANTY (DOMESTIC USE)

Mechanical: 25 years / Finish (chrome, satin chrome, stainless and PVD): 10 years

Conditions: domestic use; installed and cared for to Lockwood's instructions; proof of purchase. Summary of the Lockwood (ASSA ABLOY) residential warranty, checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- Round privacy set for cavity sliding doors, 54 mm prep hole
- Turn knob locks the bolt; the bolt also pops out as an edge pull
- Coin or screwdriver emergency release outside
- Suits sliding doors 35 to 45 mm thick
- 60 mm backset bolt

DIMENSIONS

The dimension drawing and full specifications from Lockwood follow on the next page.

LOCKWOOD ASSA ABLOY


Lockwood Vivid™

Cavity Door Slider


35MM - 45MM DOOR THICKNESS

INSTALLATION OF PRIVACY SET

Privacy set strike template

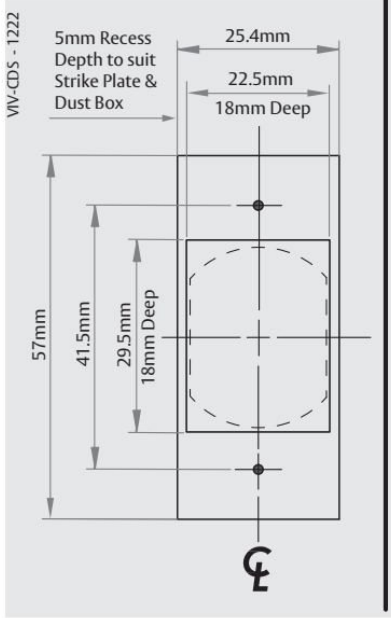

Door and pull preparation template

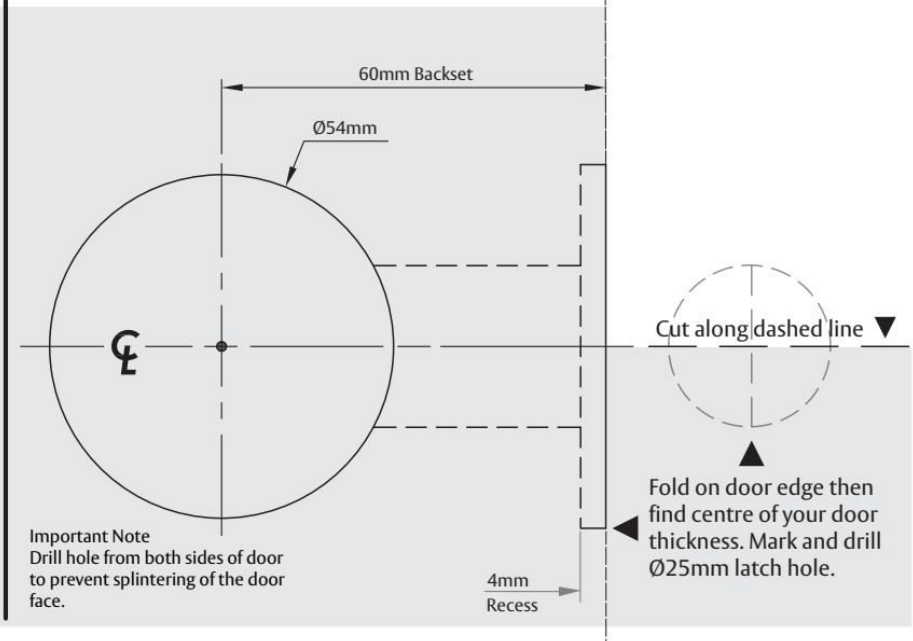


Privacy Set door and strike preparation and pull installation

Fold here on door edge

Tools Required

- Ø54mm Hole saw
- Ø25mm Spade bit
- Ø2mm Drill bit
- Power drill
- 25mm Chisel
- Pencil
- Ruler or tape measure
- Phillips head screw driver
- Flat head screw driver

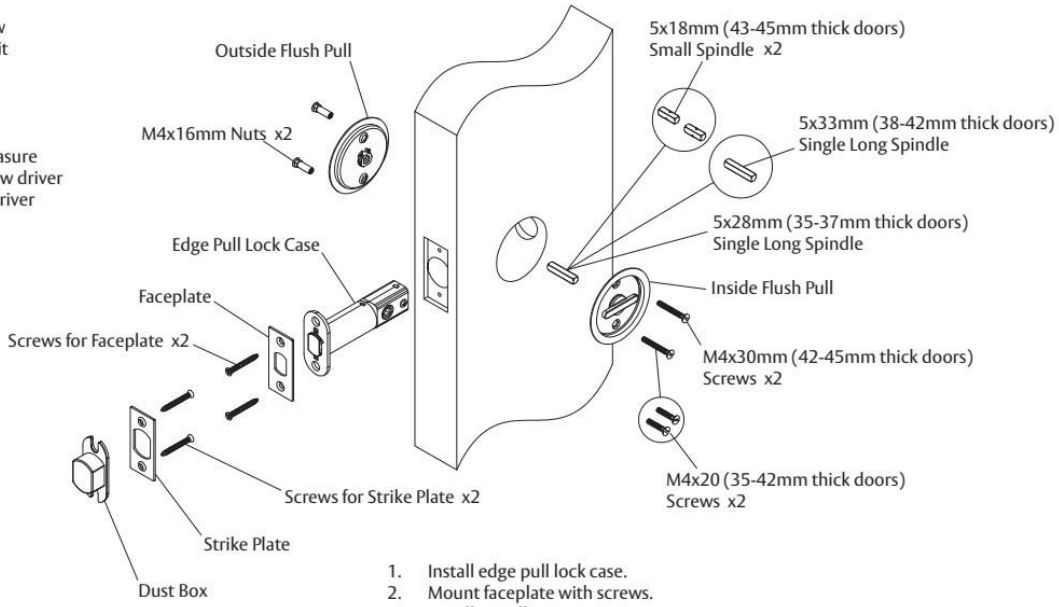

1. Install edge pull lock case.
2. Mount faceplate with screws.
3. Install Spindle:
   For 35-37mm door thickness, please use 5x28 single long spindle.
   For 38-42mm door thickness, please use 5x33mm single long spindle.
   For 43-45mm door thickness, please use both 5x18mm small spindles.
4. Install outstide flush pull with coin release and install the spindle into the thumb-turn hub.
5. Install inside flush pull and make sure spindle is in the thumb-turn recess.
6. Install outside nuts.
7. Install inside screws. Use proper screws based on the door thickness. (Do not use power tools for trim screw installation.)
8. Install the dust box.
9. Install the strike plate with screws.

ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 ©2024

Experience a safer and more open world

ASSA ABLOY