ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

NERO / TWIN SHOWER

# Serenity Twin Shower



RANGE
Serenity
TYPE
Twin shower
FINISHES
Brushed Bronze, Brushed Gold, Brushed Nickel, Chrome, Gunmetal, Matte Black
WELS RATING
3 star
FLOW
9.0 litres a minute
MATERIAL
Brass

## WARRANTY (DOMESTIC USE)

Products or parts: 25 years replacement on all finishes / Hand showers, shower heads and hoses: 25 years, replacement only (labour not included) / Parts and labour: 2 years replacement products or parts and labour

Conditions: installed by a licensed plumber; proof of purchase; residential use. Summary of the Nero warranty policy NWP2026.3 (sold after 1 May 2024), checked 7 November 2026. Full terms from Romano or the brand.

## FEATURES

- Brass construction
- WELS 3 star, 9.0 L/min
- Overhead head plus hand shower on one slide rail

## DIMENSIONS

The dimension drawing and full specifications from Nero follow on the next page.


Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au

# Serenity Twin Shower

Nero

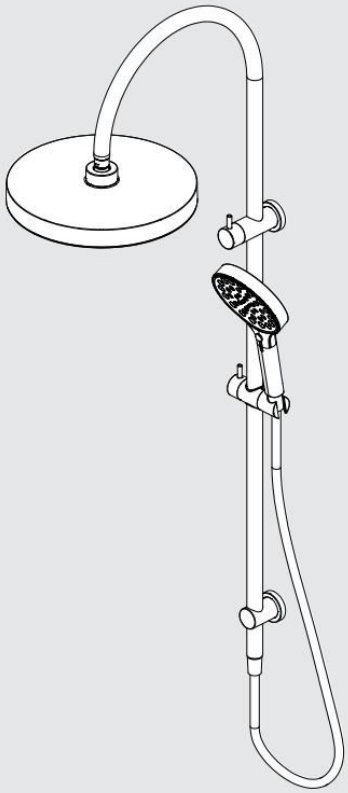

Versions:202506

## Drawing

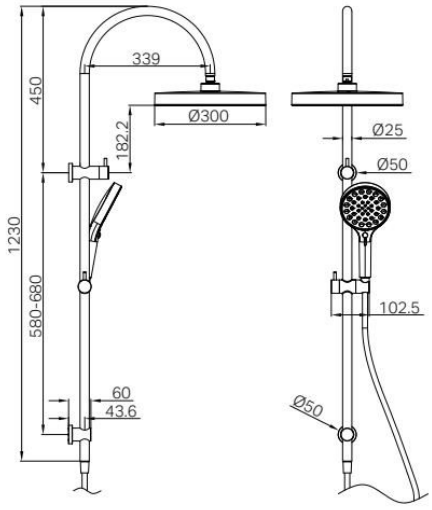


## Specifications

**Watermark License**
WM-060093

**Temperature Rating**
Min 1˚C-Max 75˚C

**Pressure Rating**
Min 150kpa - Max 500kpa

## Packaging Includes

1x Shower Arm
1x Shower Rail
1x Shower Head
1x Hand Shower ( Built- In Check Valve)
1x 1.5m PVC Hose
2x Plates
1x Installation Kit

## Finish & SKU

| | | |
|---|---|---|
| Chrome 24D073CH | Gun Metal 24D073GM | Brushed Bronze 24D073BZ |
| Matte Black 24D073MB | Brushed Gold 24D073BG | Brushed Nickel 24D073BN |

*Dimensions are nominal measurements only.
**Dual-check valve pre-installed.

# Installation Instruction

**GENERAL INSTRUCTIONS:**

- This product must be installed by a licensed plumber. Ensure that your plumbing installation conforms to the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.

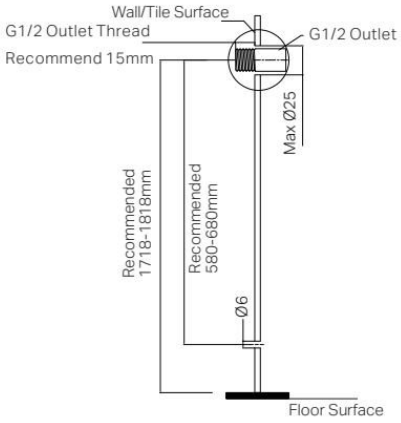


1. Ensure the G1/2 outlet thread extends 15mm beyond the finished wall or tile surface, trim the thread if necessary to achieve this length.
The recommended height for the water inlet is 1718-1818mm from the finished floor surface.
Drill a 6mm hole in the wall, 580-680mm below the center point of the inlet point, as shown in above figure.




2. Apply the G1/2 water outlet connection with Teflon tape to ensure a watertight seal.
Screw the adapter onto the outlet.
Insert expansion plug into the 6mm hole, and attach the fixing bracket. Position the fixing bracket against the wall and secure it firmly using self-tapping screws. Ensure the fixing bracket is level and stable for optimal support.

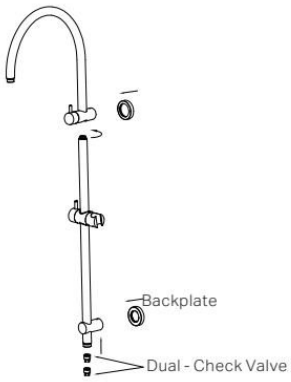


3. Insert shower arm into shower rail, and secure by grub screw.
Slide the two backplates onto shower arm and lower mounting pillar.
Note: Dual-check valve are pre-installed in the shower rail.

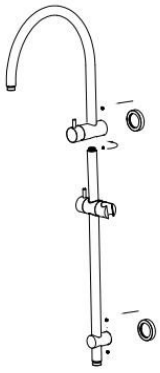

4. Position the shower rail assembly over the wall adaptors.
Tighten grub screws firmly with allen key provided.
Slide the two backplates against the wall/tile surface properly.

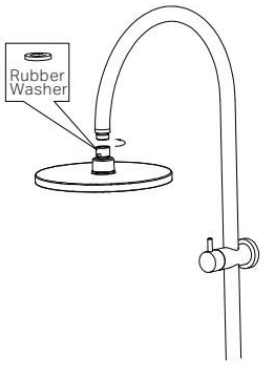


5. Screw the overhead shower into the shower arm, ensuring a rubber washer is in place for watertight seal.

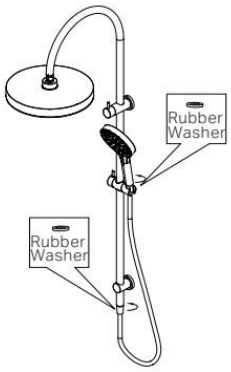


6. Attach the hand shower to the hose and connect the hose to the shower rail, ensuring that rubber washers are in place at both connection points to prevent leaks.
Confirm that all connections are securely tightened, then activate the drainage system and turn on the water supply.
Inspect all connections for any signs of leakage.

**MAINTENANCE AND CARE:**

- Regularly check the shower system and all connections for signs of wear or leaks.
- Clean all shower components with mild soapy water to maintain their appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Descale the showerhead, hand shower, and other components periodically to prevent mineral buildup, which can affect water flow and performance.
- Inspect and replace any worn-out parts, such as seals or washers, to ensure the longevity and efficiency of the shower system.
- Ensure all moving parts, such as adjustable brackets or sliding rails, are functioning smoothly and are properly lubricated if necessary.

**FINAL INSPECTION:**

- Ensure the shower operates smoothly and that there are no leaks at the connections.
- Verify that the water temperature and flow are consistent and as desired.
- Clean the area and the newly installed shower with a soft cloth to remove any installation residues.



Pages from Nero's own specification. Ask us about this product, we're happy to help.
Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au