ROMANO
Indoor & Outdoor Solutions

SPEC SHEET

NERO / TWIN SHOWER

York Twin Shower With Metal Hand Shower



RANGE
York
TYPE
Twin shower
FINISHES
Brushed Nickel, Chrome, Matte Black, Aged Brass
WELS RATING
3 star
FLOW
9.0 litres a minute
MATERIAL
Brass

WARRANTY (DOMESTIC USE)

Products or parts: 25 years replacement on all finishes / Hand showers, shower heads and hoses: 25 years, replacement only (labour not included) / Parts and labour: 2 years replacement products or parts and labour

Conditions: installed by a licensed plumber; proof of purchase; residential use. Summary of the Nero warranty policy NWP2026.3 (sold after 1 May 2024), checked 7 November 2026. Full terms from Romano or the brand.

FEATURES

- Brass construction
- WELS 3 star, 9.0 L/min
- Overhead head plus hand shower on one slide rail

DIMENSIONS

The dimension drawing and full specifications from Nero follow on the next page.

York Twin Shower

Nero

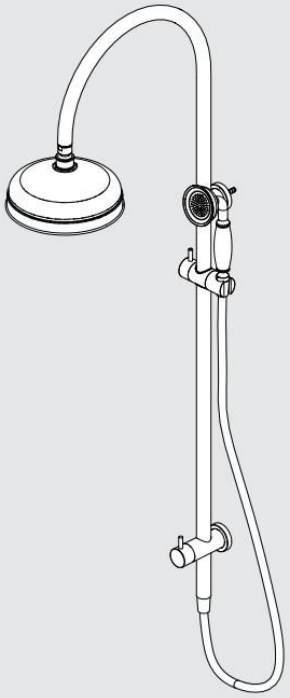

Versions:202506

Drawing

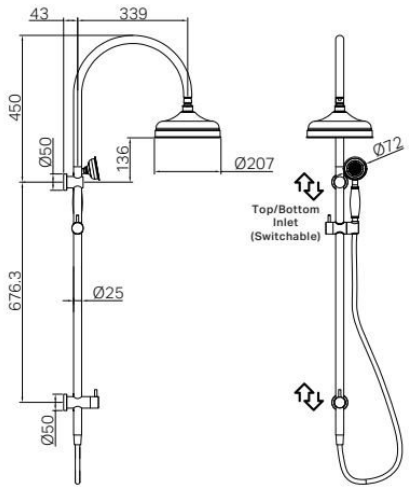

Specifications

Watermark License
WM-060093

Temperature Rating
Min 1˚C-Max 75˚C

Pressure Rating
Min 150kpa - Max 500kpa

Packaging Includes

1x Hand Shower (Built-In Check Valve)
1x Shower Head
1x Shower Arm
1x Shower Rail
1x 1.5m Hose

Finish & SKU

CHROME WITH WHITE PORCELAIN HAND SHOWER
NR69210501CH

MATTE BLACK WITH WHITE PORCELAIN HAND SHOWER
NR69210501MB

AGED BRASS WITH WHITE PORCELAIN HAND SHOWER
NR69210501AB

BRUSHED NICKEL WITH WHITE PORCELAIN HAND SHOWER
NR69210501BN

CHROME WITH METAL HAND SHOWER
NR69210502CH

MATTE BLACK WITH METAL HAND SHOWER
NR69210502MB

AGED BRASS WITH METAL HAND SHOWER
NR69210502AB

BRUSHED NICKEL WITH METAL HAND SHOWER
NR69210502BN

*Dimensions are nominal measurements only.

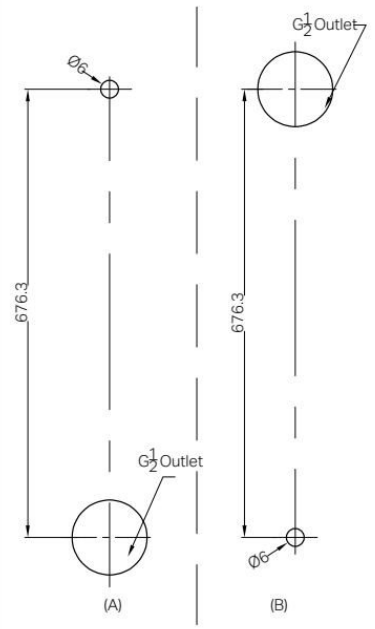

1.Drill a ϕ6mm hole at the 676.3mm downwards or upwards outlet vertical downward or upward position, as the picture A and B.

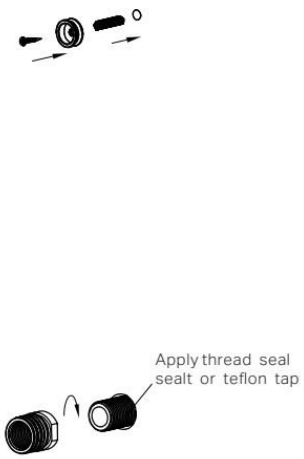

2.Screw the adapter onto the outlet. Push wall plug into drilled hole. Fit lower mounting pillar in place with screw. Tighten firmly.

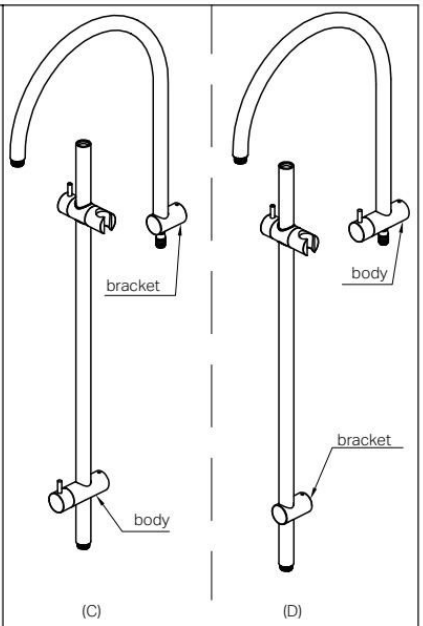

3.If you make hole as picture A, then you should install as picture C.
You can ignore step 4and install as step 5.

If you make hole as picture B, then you should install as picture D.
Then you need to change place of body and bracket as step 4.

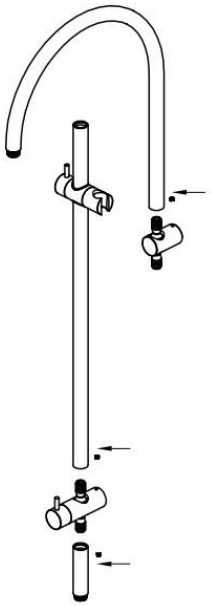

4.Unscrew 3grub screws as picture and unplug short shower rail, long short rail and shower arm one by one. Change the place of body and bracket. Then plug in short shower rail, long shower rail and shower arm and screw the 3 grub screws.

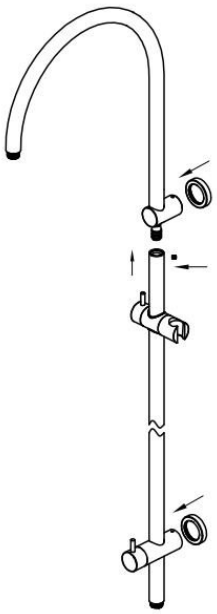

5.Screw shower rail into shower arm component.Tighten firmly. Push 2 back plates onto shower arm component and body

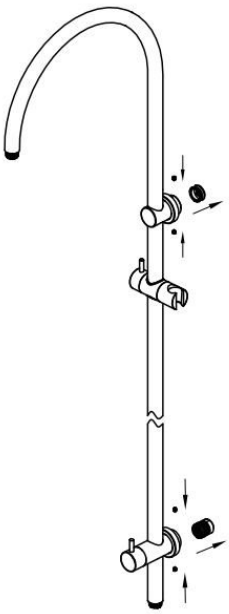

6.Locate and put shower rail assembly onto wall adaptors. Tighten grub screws firmly with allen key provided.

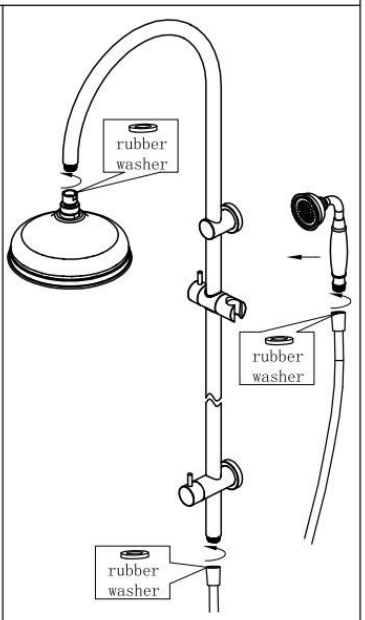

7. Screw shower head to shower are with care.(Notethe rubber washer in the shower head.)
Connect shower rail and hand shower with hose. (Note rubber washer in the hose.)
TEST & CHECK FOR LEAKS

Pages from Nero's own specification. Ask us about this product, we're happy to help.
Romano Indoor & Outdoor Solutions, 4/126 Canterbury Rd, Kilsyth South VIC 3137. 03 9720 4633. sales@romanoios.com.au